


Android App Tincam Monitor Setup Manual

1. How to get the app Tincam Monitor

1.1 Go in the Android market and Search "Tincam Monitor"



1.2 Download and Install

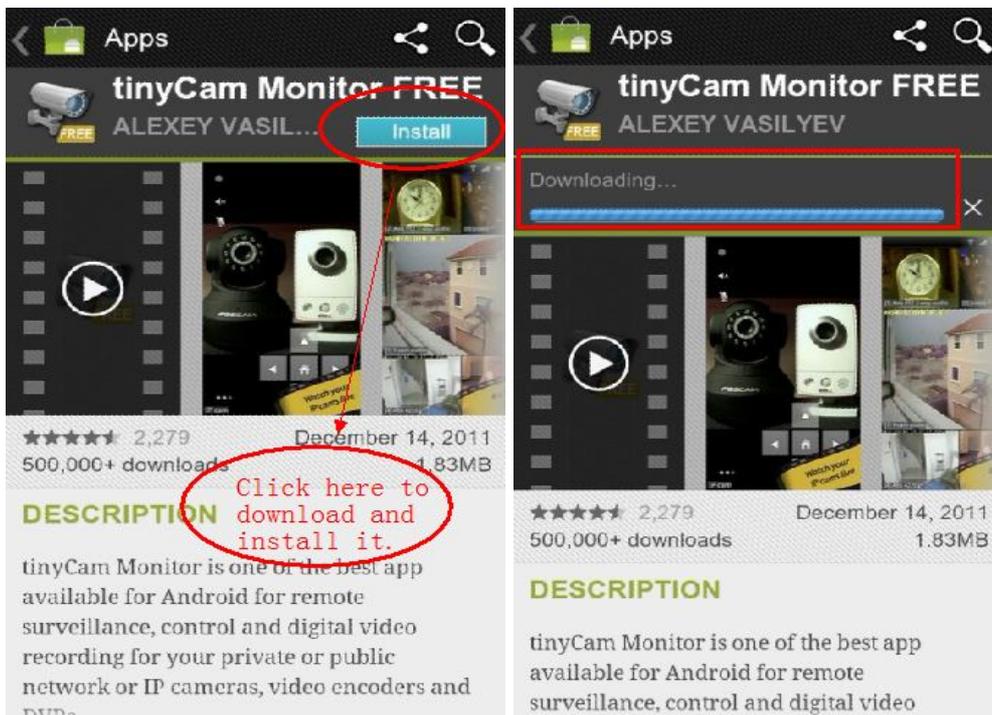


2.Installation and settings

2.1 Open the Tincam Monitor app.




2.2 Click "Manage cameras" to add new cameras

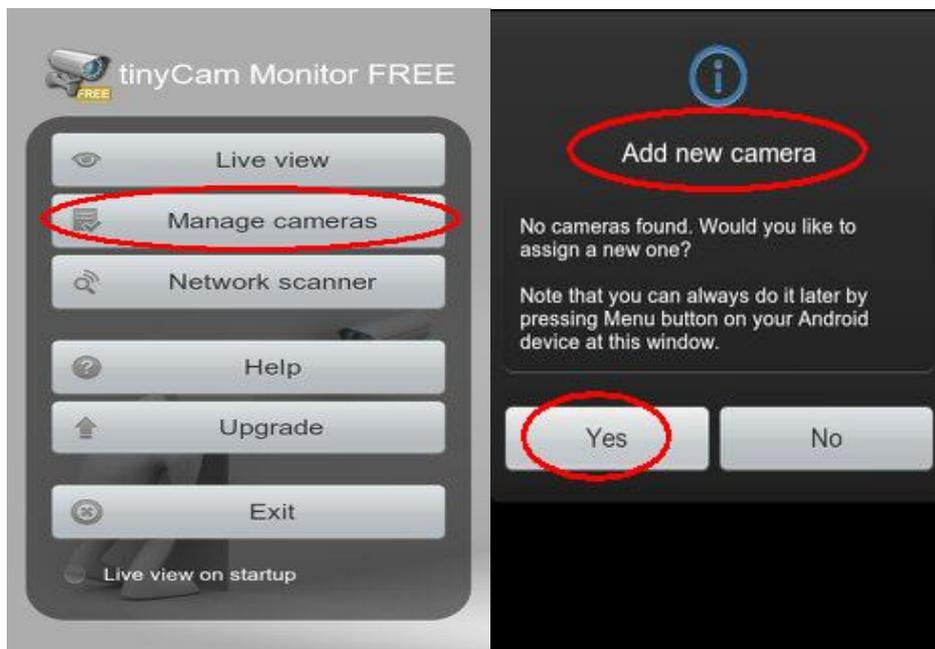


2.3 Fill in all the settings


- 1) Enter a camera name ,as you like.
- 2) Choose the correct brand , "**Apexis**" is at top of the menu.

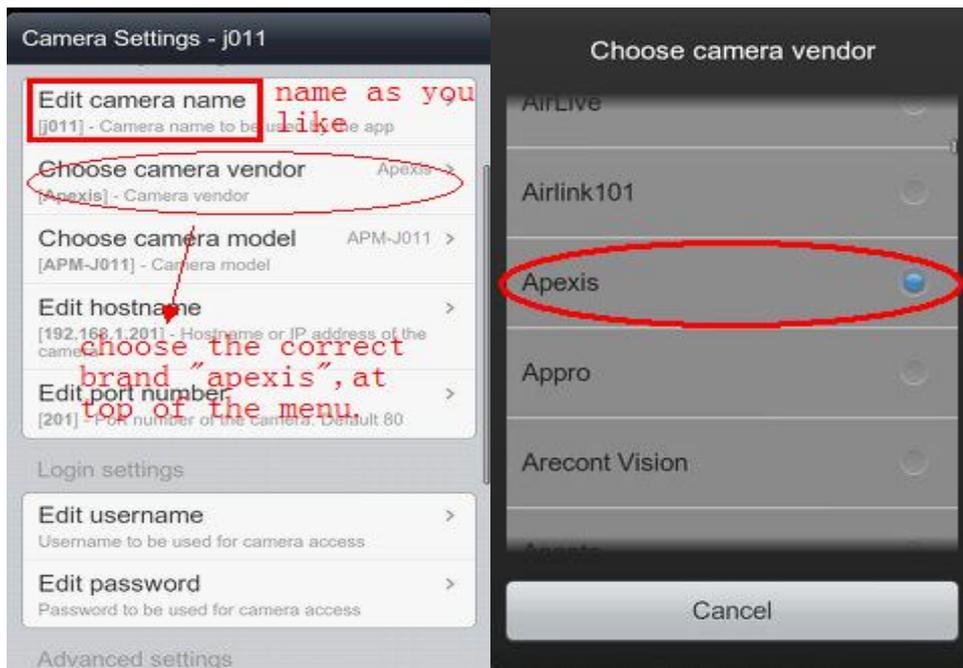

3) Choose the correct model of Apexis cameras.(an example of J011)

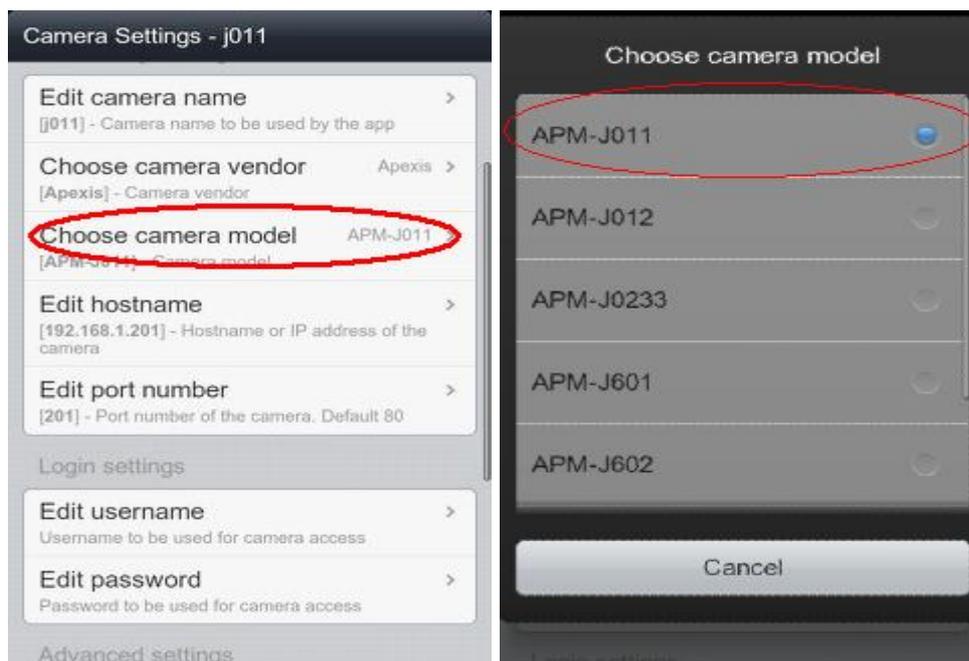

4) Enter the ip address of you camera or DDNS. Ip address is for local network and DDNS is for remote view.

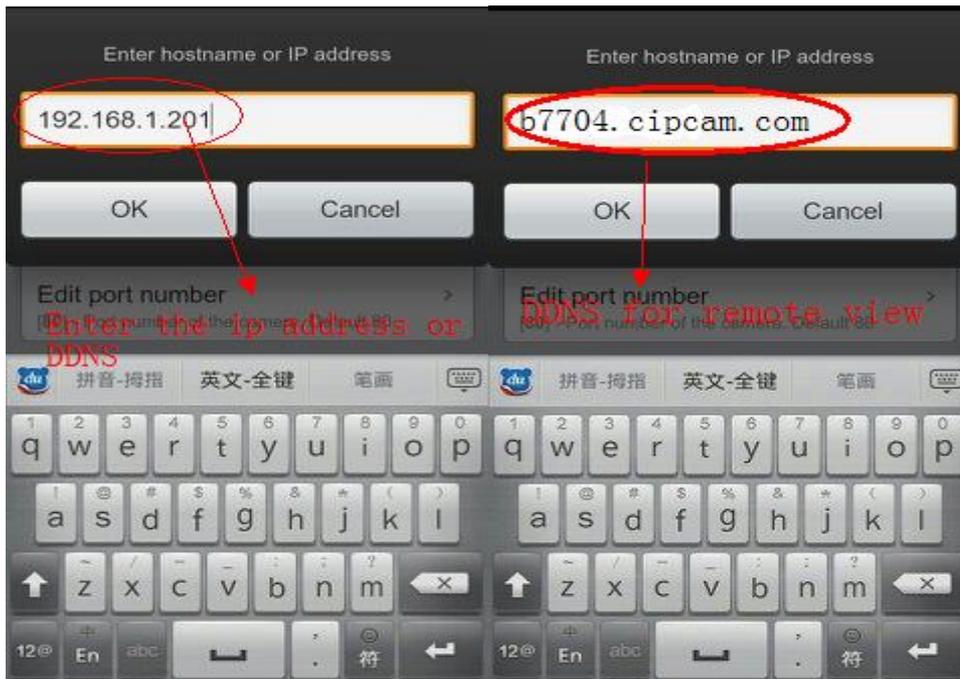


Note:if you use DDNS to view ,you must set port forwarding first in you router.

- 5) Enter the correct Hppt Port of camera.
- 6) Enter username ,default username of Mjpeg cameras is "admin", no password. H.264 defalut username and password both are "admin"



- 2.4 Go back to the main menu when you finish all the settings.Then choose " Live View "to access your camera.

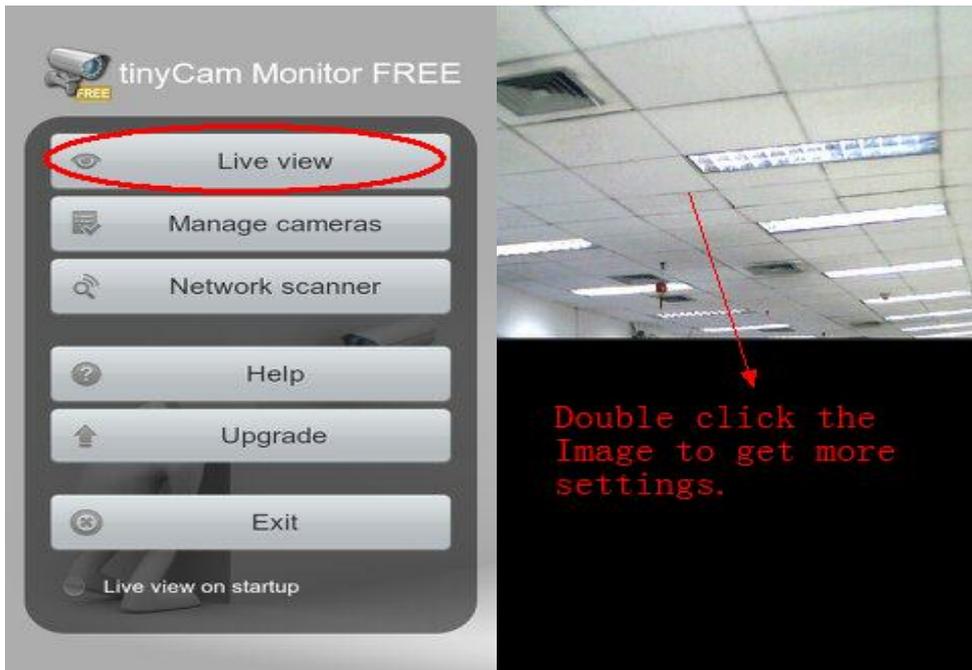

2.5 Double click the video to get more settings,such as PTZ,audio,brightness and so on.



*Note:if you have any questions about the setup ,please contact us:
Tech@apexis.com.cn*